


How to use RemoteLOCK



There is a smart-lock at the main entrance.


Touch the center of display for 1 second

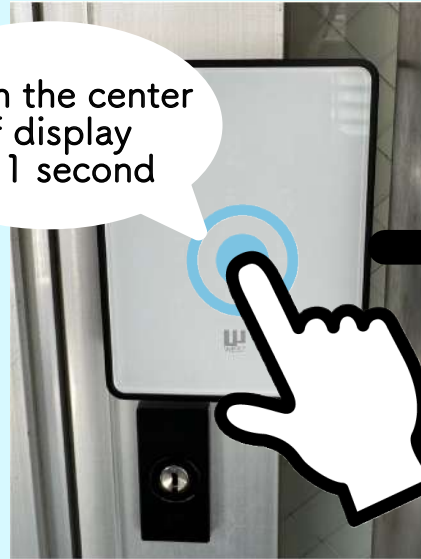


【How to unlock】

1. Touch the screen for 1 second and the number will be displayed.
2. Please push the 4-digit PIN provided in advance.

*After unlocking, the door will lock automatically. It takes about 5 to 10 seconds for the automatic lock to activate.

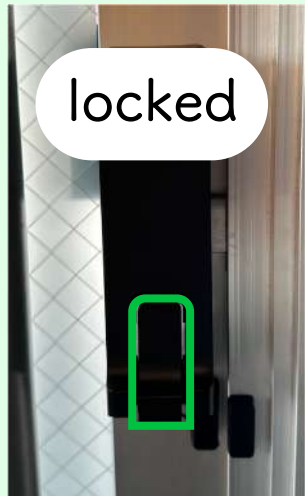

Key is in **upper position** when locked.

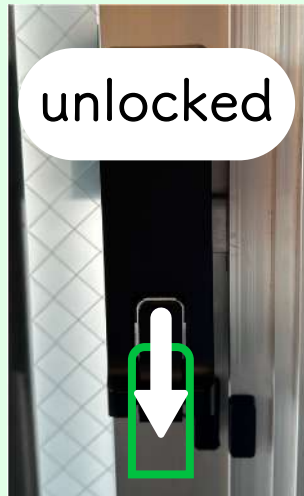

Key is in **under position** when unlocked.

【Door lock inside the house】

You can lock and unlock the door by moving the lock up and down.

【If you park your car at the front entrance】



There is a risk of the door coming into contact with the trunk of your car.

Do not open the front door with the trunk open.