


スマートロック（電子錠）の使用方法

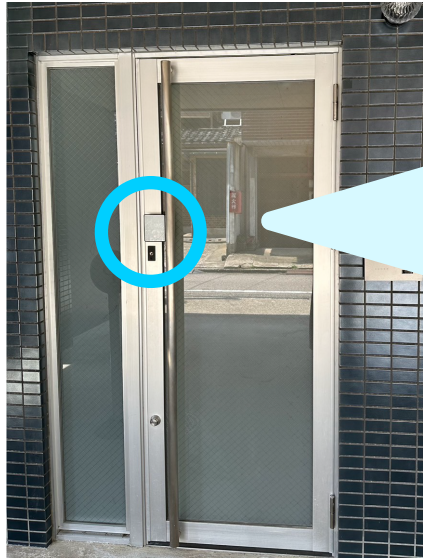

正面玄関横に
スマートロックがあります。

画面中央を
約1秒タッチ！



暗証番号を
入力（4桁）

【解錠方法】

STEP1

画面中央を約1秒タッチすると
数字が表示されます。


STEP2

事前にお伝えしていた
暗証番号 4桁を入力してください。
解錠されます。

※解錠後は自動で施錠されます。
オートロック作動まで
5～10秒ほどかかります。



上がっている状態：施錠

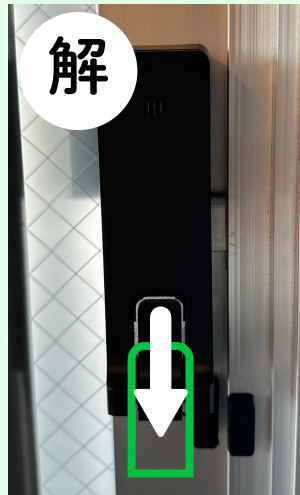

下がっている状態：解錠

【内側のカギ】


シフターを上下して
施錠・解錠ができます。

【車を正面玄関に駐車された際の注意】



扉とトランクが接触しますので、
トランクを開けたまま玄関扉を開けないように
ご注意ください。

How to use RemoteLOCK

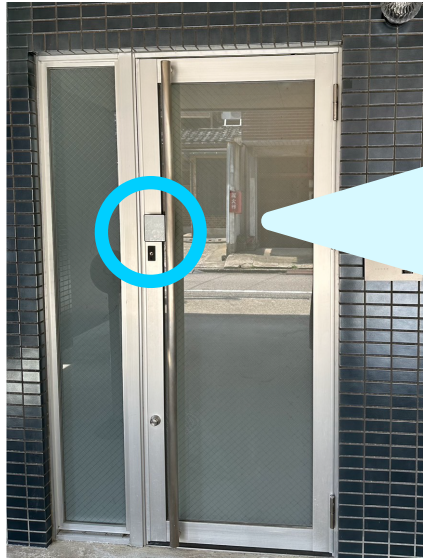

There is a smart-lock at the main entrance.


Touch the center of display for 1 second




【How to unlock】

1. Touch the screen for 1 second and the number will be displayed.
2. Please push the 4-digit PIN provided in advance.

*After unlocking, the door will lock automatically.
It takes about 5 to 10 seconds for the automatic lock to activate.

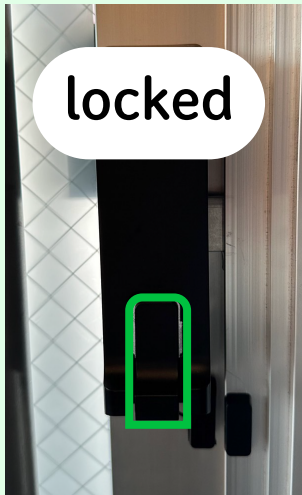

Key is in upper position when unlocked

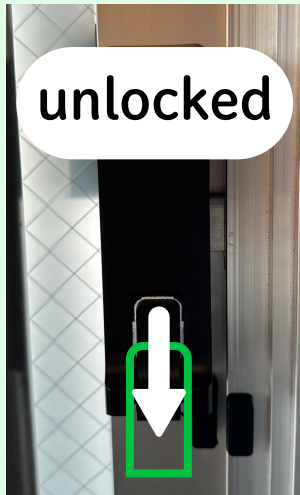

Key is under position when unlocked.

【Door lock inside the house】

You can lock and unlock the door by moving the lock up and down.

【If you park your car at the front entrance】



There is a risk of the door coming into contact with the trunk of your car.

Do not open the front door with the trunk open.